
WIN 模式

FL750 HE

FL-ESPORTS

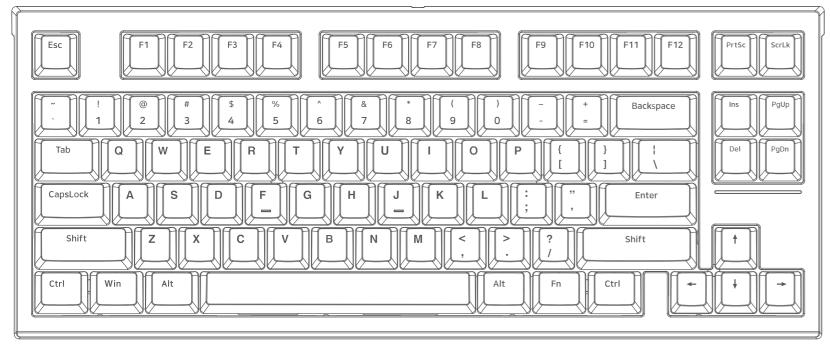


*以上键帽字符和图案仅供参考,请以实物为准

MAC 模式

FL750 HE

FL-ESPORTS

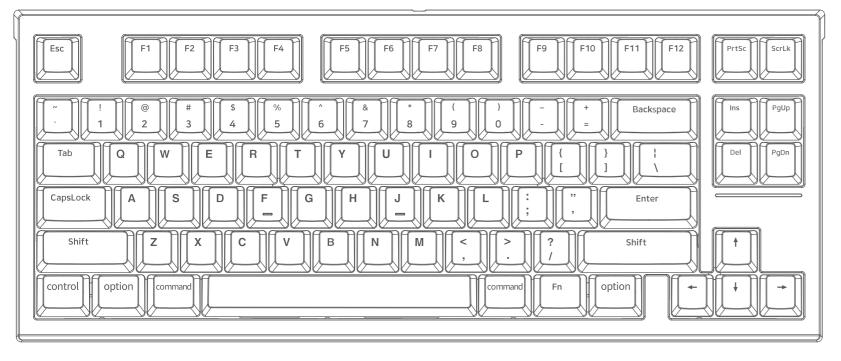

*以上键帽字符和图案仅供参考,请以实物为准

FN组合键功能说明

按 键	功 能 描 述
FN+右CTRL	切换灯光模式
FN+右SHIFT	切换常亮模式颜色 (红-橙-黄-绿-青-蓝-紫-白)
FN+DEL	直接进入常亮模式
FN+INS	切换装饰灯条模式
FN+PRT	一键打开\关闭灯光 (主键区+装饰灯)
FN+左右方向键	调整背光变化速率,向左调慢, 向右调快
FN+上下方向键	调整背光亮度,向上调亮, 向下调暗

系统控制

按 键	功 能 描 述
FN+左CTRL	长按2秒,进入按键校准模式
FN+ESC	长按:2秒恢复出厂设置 短按:MAC系统下F区和FN+ F区逻辑切换
FN+左WIN键	锁或解锁WIN键
FN+`~	长按2秒MAC和WIN手动切换系统 (切换成功后`~字键白光闪烁3次提示)

WINDOWS_ANDIOID 系统模式下	
按 键	功能描述
FN+F1	屏幕亮度-
FN+F2	屏幕亮度+
FN+F3	计算器
FN+F4	我的电脑
FN+F5	邮件
FN+F6	主页
FN+F7	上一曲
FN+F8	播放暂停
FN+F9	下一曲
FN+F10	静音
FN+F11	音量减
FN+F12	音量加
FN+SCR	PAUSE
FN+PGUP	НОМЕ
FN+PGDN	END

功能描述
屏幕亮度-
屏幕亮度+
任务控制 (左CTRL+方向上)
呼出窗口(左CTRL+ 左SHIFT+方向下)
F5
F6
上一曲
播放暂停
下一曲
静音
音量减
音量加
PAUSE
НОМЕ
END
control
option
command

所谓键位冲突是指用户在使用计算机设备时,同时摁下 键位上的多个按键以及组合键时,电脑无法同时反映出来。 特别是对于游戏用户在游戏过程中出现的键位冲突,是特 题,提供了完美的解决方案。

产品参数

产品类型:FL750 HE 磁轴键盘 产品尺寸:348.3mm(L) x 143mm(W) x 40mm(H) 按键数量:83键 键盘功能:全键无冲突 工作电压:5V 连接方式:TYPE-C 按键寿命:超过1亿次 触发键程:1.5~2.4mm

键盘接口:USB

线长:1.6米

Q:为什么我的WIN键不起作用? A:在按FN+WIN键锁定WIN键的情况下,WIN键无法触发 使用。要解除锁定只需要再按一次FN+WIN键。

Q:为什么我的WIN键和ALT键互换了?

A:键盘进入了MAC OS模式。在此模式下Windows系统 上的WIN键和ALT键将互换位置。长按FN+`~键可手动


Q:为什么我在MAC OS模式下F1-F12变成了功能键? A:在MAC OS模式下,短按FN+ESC将切换F区逻辑。

Q:如何自定义按键绑定和使用宏功能? A:您可以从官方网站www.flesports.com下载最新的

Better for WIN

FL750 HE

FL-ESPORTS

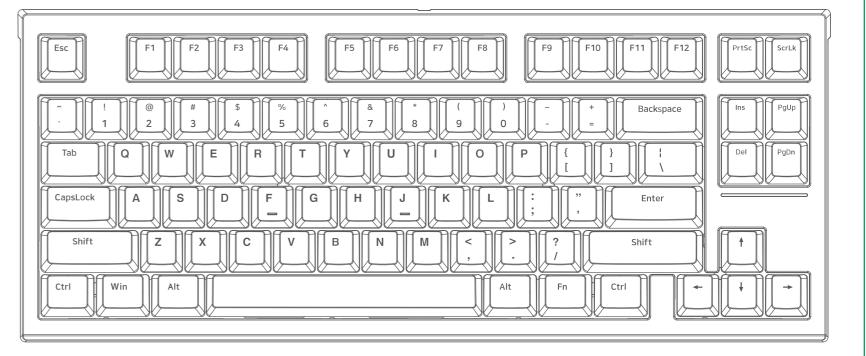


*The above keycap layout is for reference only, please see the real product.

Better for MAC

FL750 HE



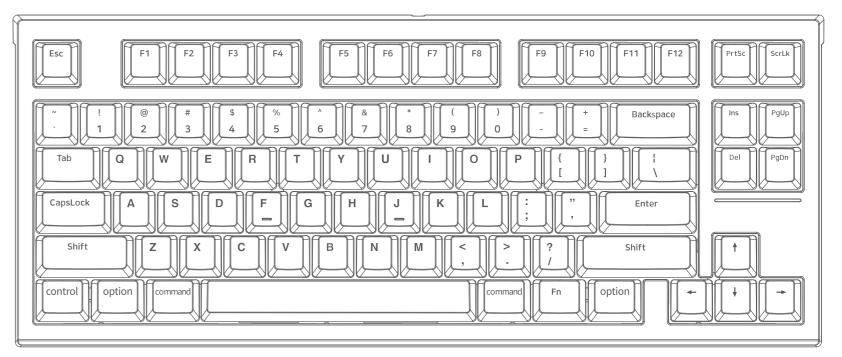

*The above keycap layout is for reference only, please see the real product.

FN combination keys manual

Light Control		
Key	Function description	
FN+right CTRL	Switch backlight effect	
FN+right shift	Switch constant backlight color (Red - orange - yellow - green - Cyan - blue - purple - white)	
FN+DEL	Enter constant backlight mode	
FN+INS	Switch light bar effect	
FN+PRT	Turn on\off the backlight and light bar	
FN+Left/Right key	Adjust backlight brightness	
FN+Up/Down key	Adjust backlight effect speed	

System control

Key	Function description
FN+LEFT CTRL	Long press(2s): Enter key calibration mode
FN+ESC	Long press(2s): Perform a factory reset Short press: Switch between F1-F12 and multimedia keys (in MAC mode)
FN+LEFT WIN	Lock or unlock the WIN key
FN+ ~	Long press(2s): Switch between WIN mode and MAC mode `~ flashes if switch successfully

FN+F1	Screen brightness -
FN+F2	Screen brightness +
FN+F3	The Reckoner
FN+F4	My computer
FN+F5	Mail
FN+F6	Home page
FN+F7	Previous song
FN+F8	Play pause
FN+F9	Next song
FN+F10	Sound off
FN+F11	Volume down
FN+F12	Volume plus
FN+SCR	PAUSE
FN+PGUP	НОМЕ

FN+PGDN

Function description

Key	Function description
F1	Screen brightness -
F2	Screen brightness +
F3	Task control (Left CTRL+ direction)
F4	Outgoing window(Left CTRL +Left SHIFT+ direction down)
F5	F5
F6	F6
F7	Previous song
F8	Play pause
F9	Next song
F10	Sound off
F11	Volume down
F12	Volume plus
FN+SCR	PAUSE
FN+PGUP	НОМЕ
FN+PGDN	END
CTRL	control
WIN	option

ALT

Full-key conflict-free backlight

The so-called key conflict refers to the situation, when a user using a computer device, presses multiple keys and combination keys simultaneously and the computer fails to respond to them all at the same time. Especially for game users, key conflicts during the game are particularly frustrating. The gaming backlight mechanical keyboard provides the perfect solution to the common problem of key conflicts.

Product parameter

Product Type: FL750 HE magnetic axis keyboard Product Size: 348.3mm (L) x 143mm (W) x 40mm (H) Total key number: 83 keys Keyboard function: All keys anti-ghosting Working voltage: 5V Cable connector type: TYPE-C Switch lifespan:>100 millions Conduction Travel:1.5mm~2.4mm Cable length: 1.6 meters Keyboard connector type: USB

Q:Why is my WIN key not working? A: If you press FN+WIN to lock the WIN key, the WIN key will be disabled. To unlock it, simply press FN+WIN again.

Q:Why have my WIN and ALT keys swapped?
A: The keyboard is in Mac OS mode. In this mode, the WIN and ALT keys swap positions on Windows systems. To switch MAC OS/Windows mode, press and hold FN+ $\,\widehat{}\,\,$ \sim for 2 seconds to manually change

Q:Why do F1-F12 become media keys in Mac OS mode? A: In Mac OS mode, short press FN+ESC will switch between F1-F12 and multimedia keys.

Q: How can I customize key bindings and use macro functions?

website at www.flesports.com to access all keyboard



腹灵官网

制造商:东莞市腹灵竞技电子有限公司 产地:广东省东莞市石龙镇王屋洲工业区B栋 网址:www.flesports.com www.flesportsglobal.com