 


## WIN 模式

Ge065 HE

FL·CMMK®

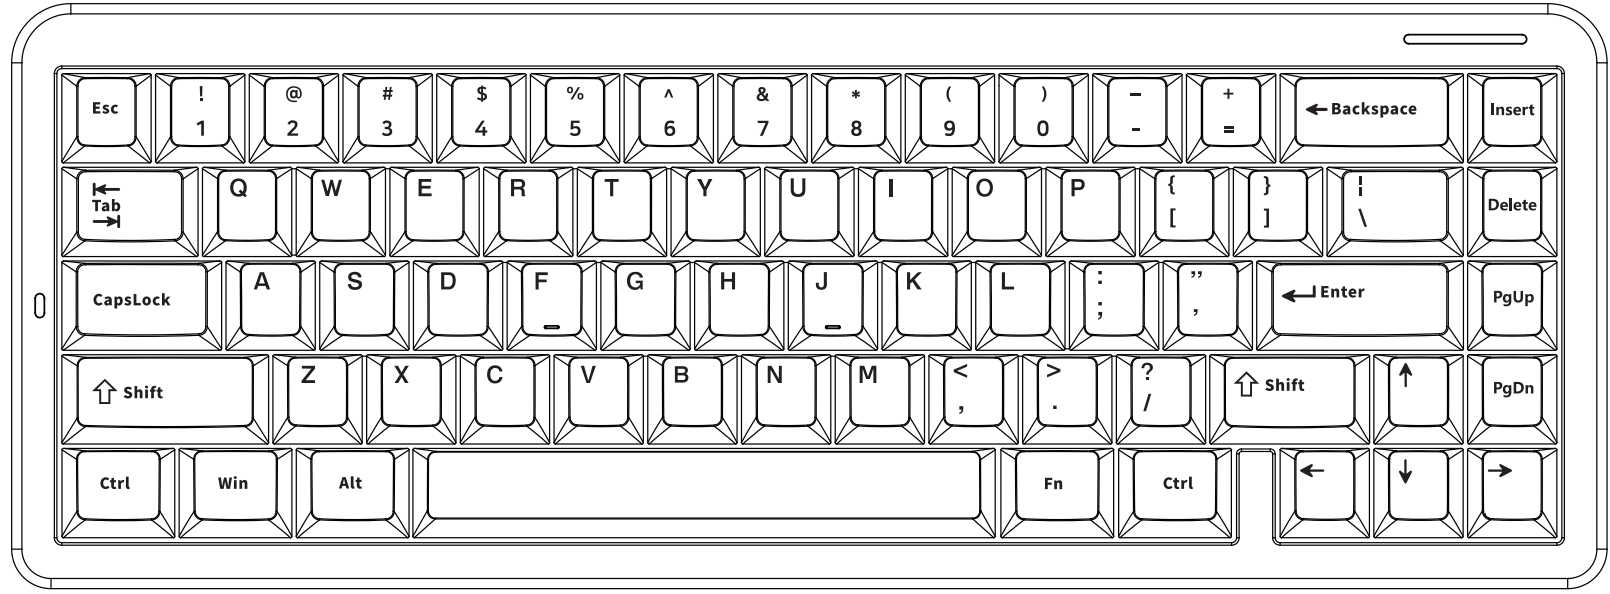 


\*以上键帽字符和图案仅供参考，请以实物为准

## MAC 模式

Ge065 HE

FL·CMMK®

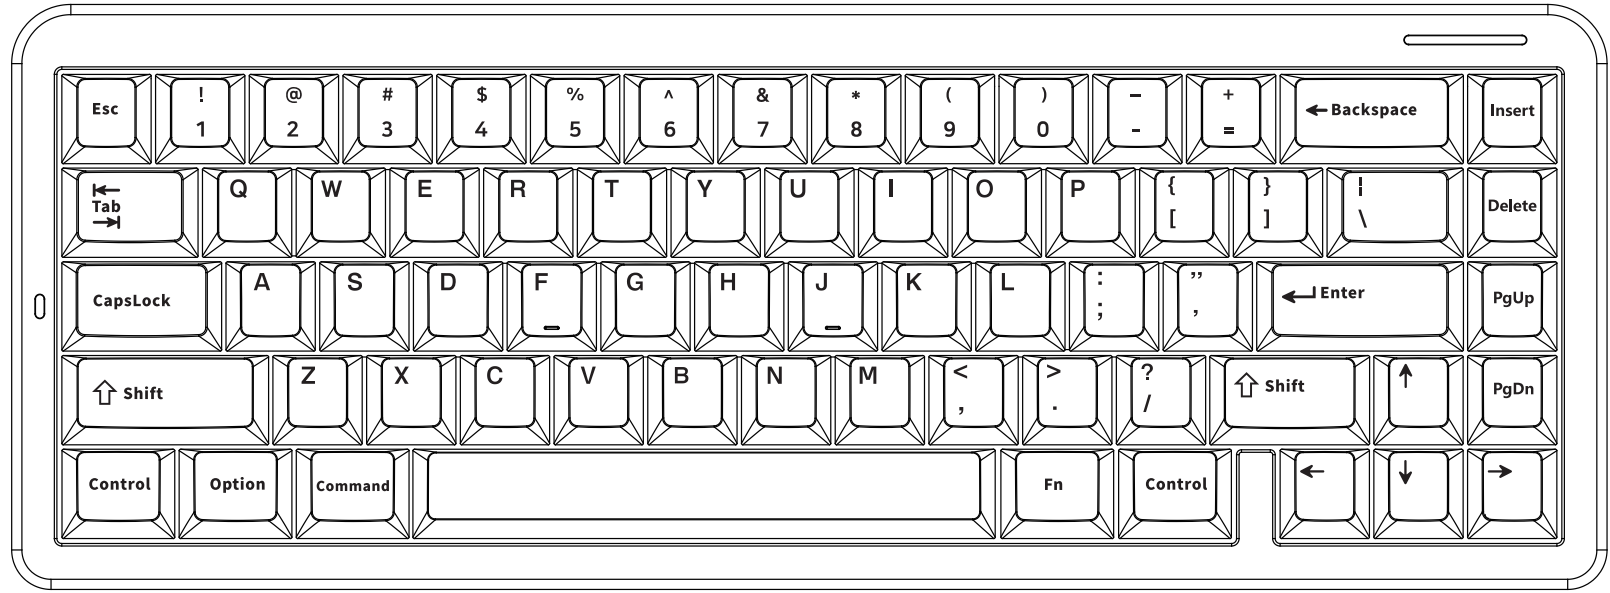


\*以上键帽字符和图案仅供参考，请以实物为准

## Better for WIN

 Ge065 HE

FL·CMMK®

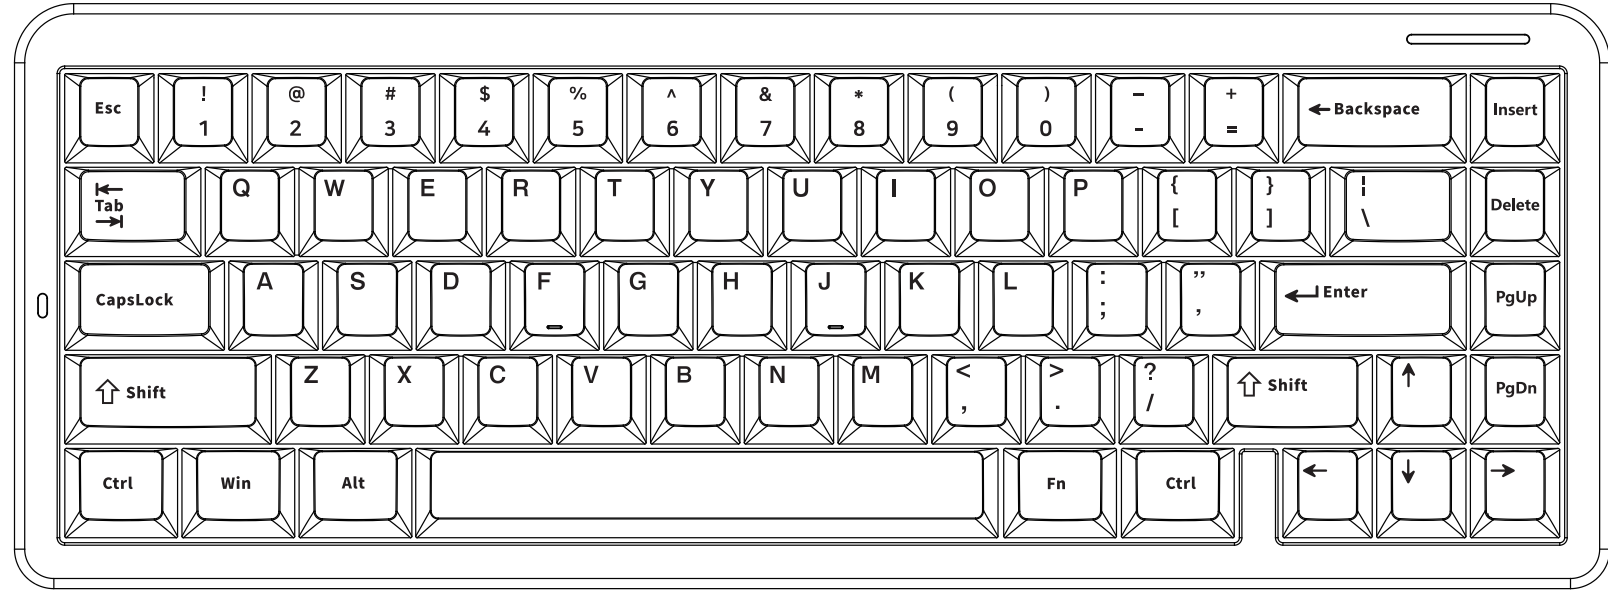


\*The above keycap layout is for reference only, please see the real product.

## Better for MAC

 Ge065 HE

FL·CMMK®

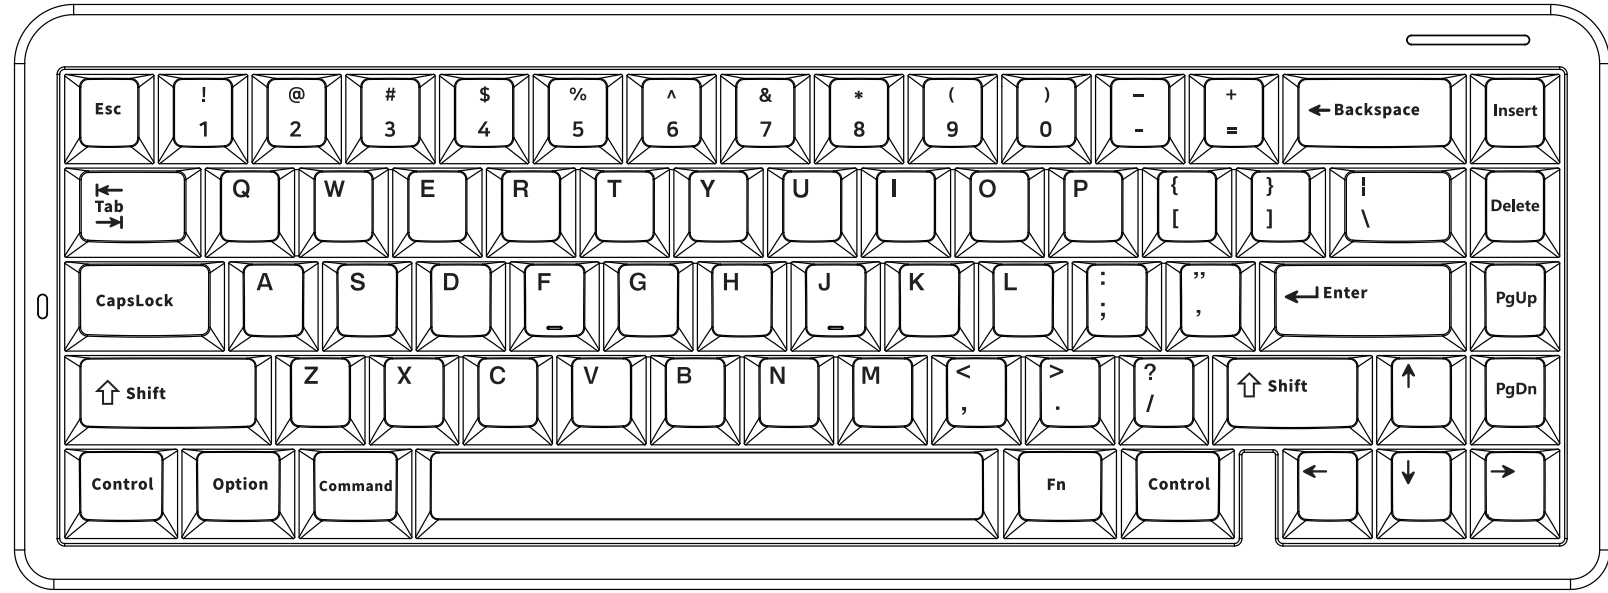

\*The above keycap layout is for reference only, please see the real product.

### FN组合键功能说明

#### 灯光控制

| 按键           | 功能描述              |
|--------------|-------------------|
| FN+Backspace | 一键打开/关闭灯光(主键区)    |
| FN+右_Ctrl    | 切换灯光模式            |
| FN+右_Shift   | 切换灯光颜色            |
| FN+Del       | 直接进入常亮模式          |
| FN+          | 切换装饰灯条模式          |
| FN+/?        | 切换灯光方向            |
| FN+左右方向键     | 调整背光变化速率,向左调慢向右调快 |
| FN+上下方向键     | 调整背光亮度,向上调亮向下调暗   |

#### 系统控制

| 按键       | 功能描述                                    |
|----------|-----------------------------------------|
| FN+左CTRL | 长按2秒,进入按键校准模式                           |
| FN+ESC   | 长按:2秒恢复出厂设置<br>短按:FN+ESC= FN+SHIFT+ESC= |
| FN+左WIN键 | 锁或解锁WIN键                                |
| FN+TAB   | 常按2秒:WIN和MAC系统切换                        |
| FN+INS   | MAC系统下FN+11=+逻辑切换                       |

#### Windows\_Android 系统模式下

| 按键    | 功能描述  |
|-------|-------|
| FN+1  | F1    |
| FN+2  | F2    |
| FN+3  | F3    |
| FN+4  | F4    |
| FN+5  | F5    |
| FN+6  | F6    |
| FN+7  | F7    |
| FN+8  | F8    |
| FN+9  | F9    |
| FN+0  | F10   |
| FN+ - | F11   |
| FN+ = | F12   |
| FN+I  | PRTSC |
| FN+O  | SCRLK |
| FN+P  | PAUSE |
| FN+M  | APP   |

#### IOS\_MAC系统模式下

| 按键    | 功能描述                 |
|-------|----------------------|
| FN+1  | F1 显示器亮度-            |
| FN+2  | F2 显示器亮度+            |
| FN+3  | F3 左CTRL+方向键上        |
| FN+4  | F4 左CTRL+左SHIFT+方向键下 |
| FN+5  | F5                   |
| FN+6  | F6                   |
| FN+7  | F7 上一曲               |
| FN+8  | F8 播放/暂停             |
| FN+9  | F9 下一曲               |
| FN+0  | F10 静音               |
| FN+ - | F11 音量-              |
| FN+ = | F12 音量+              |
| FN+I  | PRTSC                |
| FN+O  | SCRLK                |
| FN+P  | PAUSE                |
| FN+M  | APP                  |
| CTRL  | Control              |
| WIN   | Command              |
| ALT   | Option               |

#### 全键无冲突背光机械键盘

所谓键位冲突是指用户在使用计算机设备时,同时按下键位上的多个按键以及组合键时,电脑无法同时反映出来,特别对于游戏用户在游戏过程中出现的键位冲突,是特别致命的。游戏背光机械键盘针对键位冲突这一常见问题,提供了完美的解决方案。

#### 产品参数

产品类型: Ge065 HE 磁轴键盘  
产品尺寸:325.5mm(L) x 121.7mm(W) x 46.6mm(H)  
按键数量:67键  
键盘功能:全键无冲突  
工作电压:5V  
连接方式:TYPE-C  
按键寿命:超过5000万次  
触发键程:1.5-2.4mm  
线长:1.6米  
键盘接口:USB

#### Q&A

Q:为什么我的WIN键不起作用?  
A:在按FN+WIN键锁定WIN键的情况下,WIN键无法触发使用,要解除锁定只需要再按一次FN+WIN键。

Q:为什么我的WIN键和ALT键互换了?  
A:键盘进入了MAC OS模式,在此模式下Windows系统上的WIN键和ALT键将互换位置。长按FN+TAB键可手动切换系统。

Q:为什么我在MAC OS模式下1~= 变成了F1-F12?  
A:在MAC OS模式下,短按FN+INS将切换数字键与F区逻辑。

Q:如何自定义按键绑定和使用功能?  
A:您可以从官方网站www.flesports.com下载最新的驱动程序体验键位的所有功能。

### FN Function description of key combination

#### Light Control

| key               | Function description                  |
|-------------------|---------------------------------------|
| FN+Backspace      | Turn on/off the backlight             |
| FN+Right_Ctrl     | Switch backlight effect               |
| FN+Right_Shift    | Switch constant backlight color       |
| FN+Del            | Enter constant backlight mode         |
| FN+               | Switch light bar effect               |
| FN+/?             | Switch the backlight effect direction |
| FN+Left/Right key | Adjust backlight effect speed         |
| FN+Up/Down key    | Adjust backlight brightness           |

#### System control

| Key          | Function description                                                          |
|--------------|-------------------------------------------------------------------------------|
| FN+Left Ctrl | Long press(2s): Enter key calibration mode                                    |
| FN+ESC       | Long press(2s): Perform a factory reset<br>Short press: FN+ESC= FN+SHIFT+ESC= |
| FN+Left Win  | Lock or unlock the WIN key                                                    |
| FN+Tab       | Long press(2s): Switch between WIN mode and MAC mode                          |
| FN+Ins       | Switch between 1~ = and F1-F12 (in MAC mode)                                  |

#### Windows\_Android System model

| Key   | Function description |
|-------|----------------------|
| FN+1  | F1                   |
| FN+2  | F2                   |
| FN+3  | F3                   |
| FN+4  | F4                   |
| FN+5  | F5                   |
| FN+6  | F6                   |
| FN+7  | F7                   |
| FN+8  | F8                   |
| FN+9  | F9                   |
| FN+0  | F10                  |
| FN+ - | F11                  |
| FN+ = | F12                  |
| FN+I  | PATSC                |
| FN+O  | SCRLK                |
| FN+P  | PAUSE                |
| FN+M  | APP                  |

#### IOS\_MAC System model

| Key   | Function description                |
|-------|-------------------------------------|
| FN+1  | F1 Display brightness -             |
| FN+2  | F2 Display brightness +             |
| FN+3  | F3 L- CTRL+ Up arrow key            |
| FN+4  | F4 L-CTRL+ L-SHIFT + Down arrow key |
| FN+5  | F5                                  |
| FN+6  | F6                                  |
| FN+7  | F7 PREV                             |
| FN+8  | F8 Play \ Pause                     |
| FN+9  | F9 NEXT                             |
| FN+0  | F10 Mute                            |
| FN+ - | F11 Volume -                        |
| FN+ = | F12 Volume +                        |
| FN+I  | PATSC                               |
| FN+O  | SCRLK                               |
| FN+P  | PAUSE                               |
| FN+M  | APP                                 |
| CTRL  | control                             |
| WIN   | option                              |
| ALT   | command                             |

#### Full-key conflict-free backlight mechanical keyboard

The so-called key conflict refers to the situation, when a user using a computer device, presses multiple keys and combination keys simultaneously and the computer fails to respond to them all at the same time. Especially for game users, key conflicts during the game are particularly frustrating. The gaming backlight mechanical keyboard provides the perfect solution to the common problem of key conflicts.

#### Product parameter

Product Type: Ge065 HE Magnetic Axis Keyboard  
Product Size: 325.5mm(L) x 121.7mm(W) x 46.6mm(H)  
Number of keys: 67 keys  
Keyboard function: Full key conflict-free  
Working voltage: 5V  
Connection mode: TYPE-C  
Switch lifespan: Over 50 million times  
Trigger key travel: 1.5mm-2.4mm  
Cable length: 1.6 meters  
Keyboard interface: USB

#### Q&A

Q: Why is my WIN key not working?  
A: If you press FN-WIN to lock the WIN key, the WIN key will be disabled. To unlock it, simply press FN-WIN again.

#### Q: Why have my WIN and ALT keys swapped?


A: The keyboard is in Mac OS mode. In this mode, the WIN and ALT keys swap positions on Windows systems. To switch MAC OS/Windows mode, press and hold FN+TAB for 2 seconds to manually change the system mode.

#### Q: Why do 1~= become F1-F12 in Mac OS mode?

A: In Mac OS mode, short press FN+INS will switch between F1-F12 and multimedia keys.


Q: How can I customize key bindings and use?  
A: You can download the latest drivers from the official website at [www.flesports.com](http://www.flesports.com) to access all keyboard functions.

可用驱动程序重新定义属于你的按键功能和组合功能, 背光灯效也可更新下载。

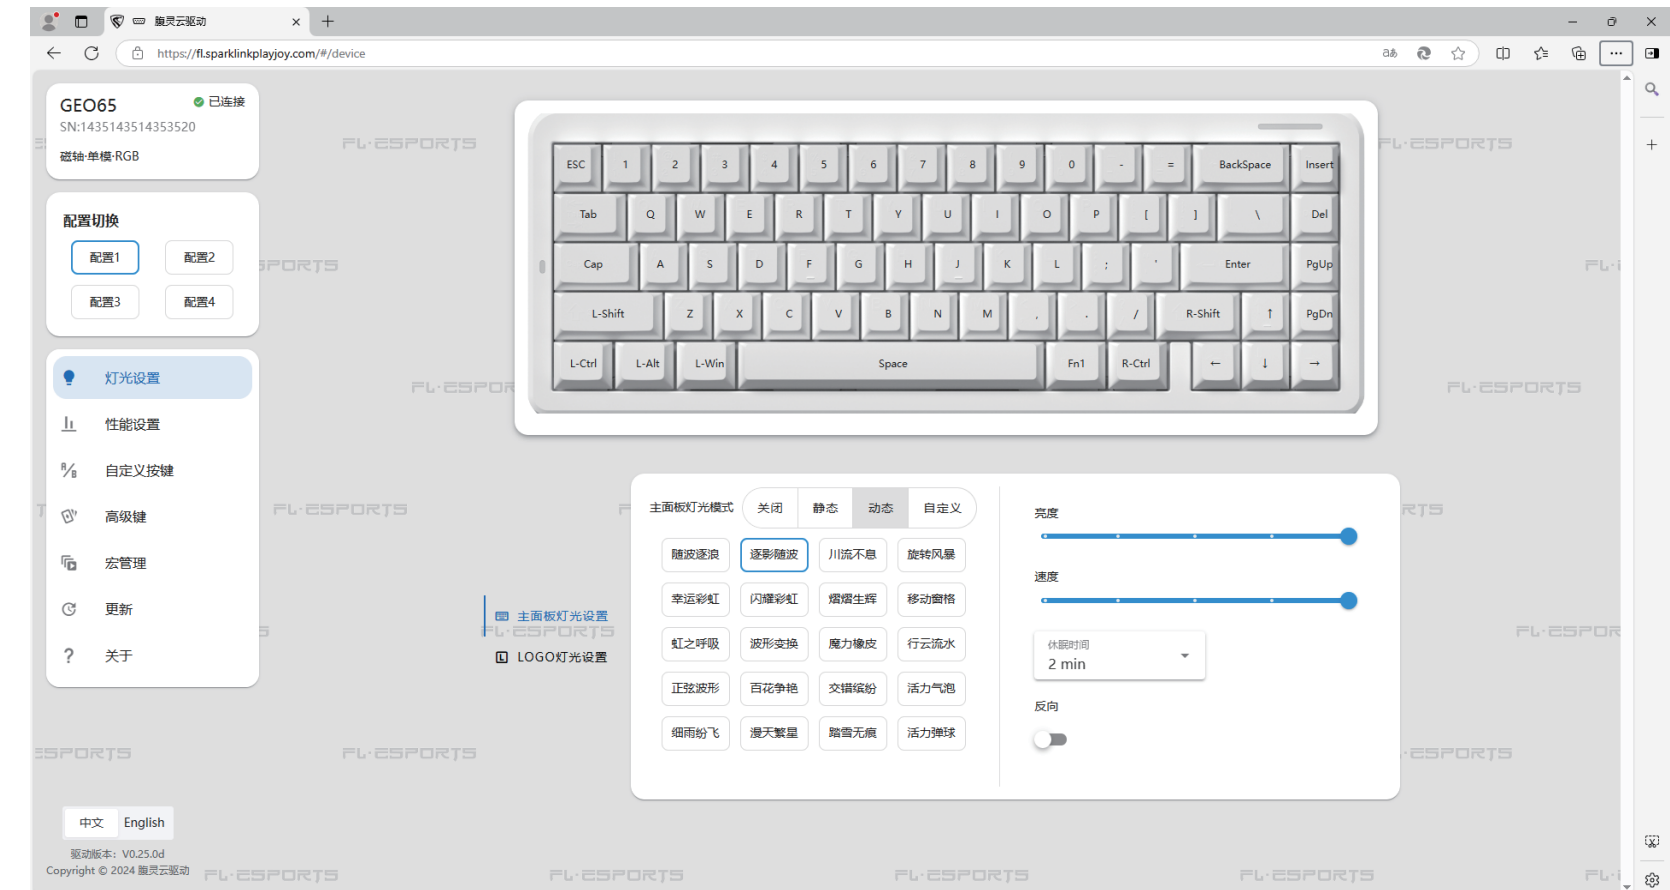

驱动程序官方下载网址: [www.flesports.com](http://www.flesports.com)

The software can be redefined with your own button functions and combinations, and backlight effects can be updated and downloaded.

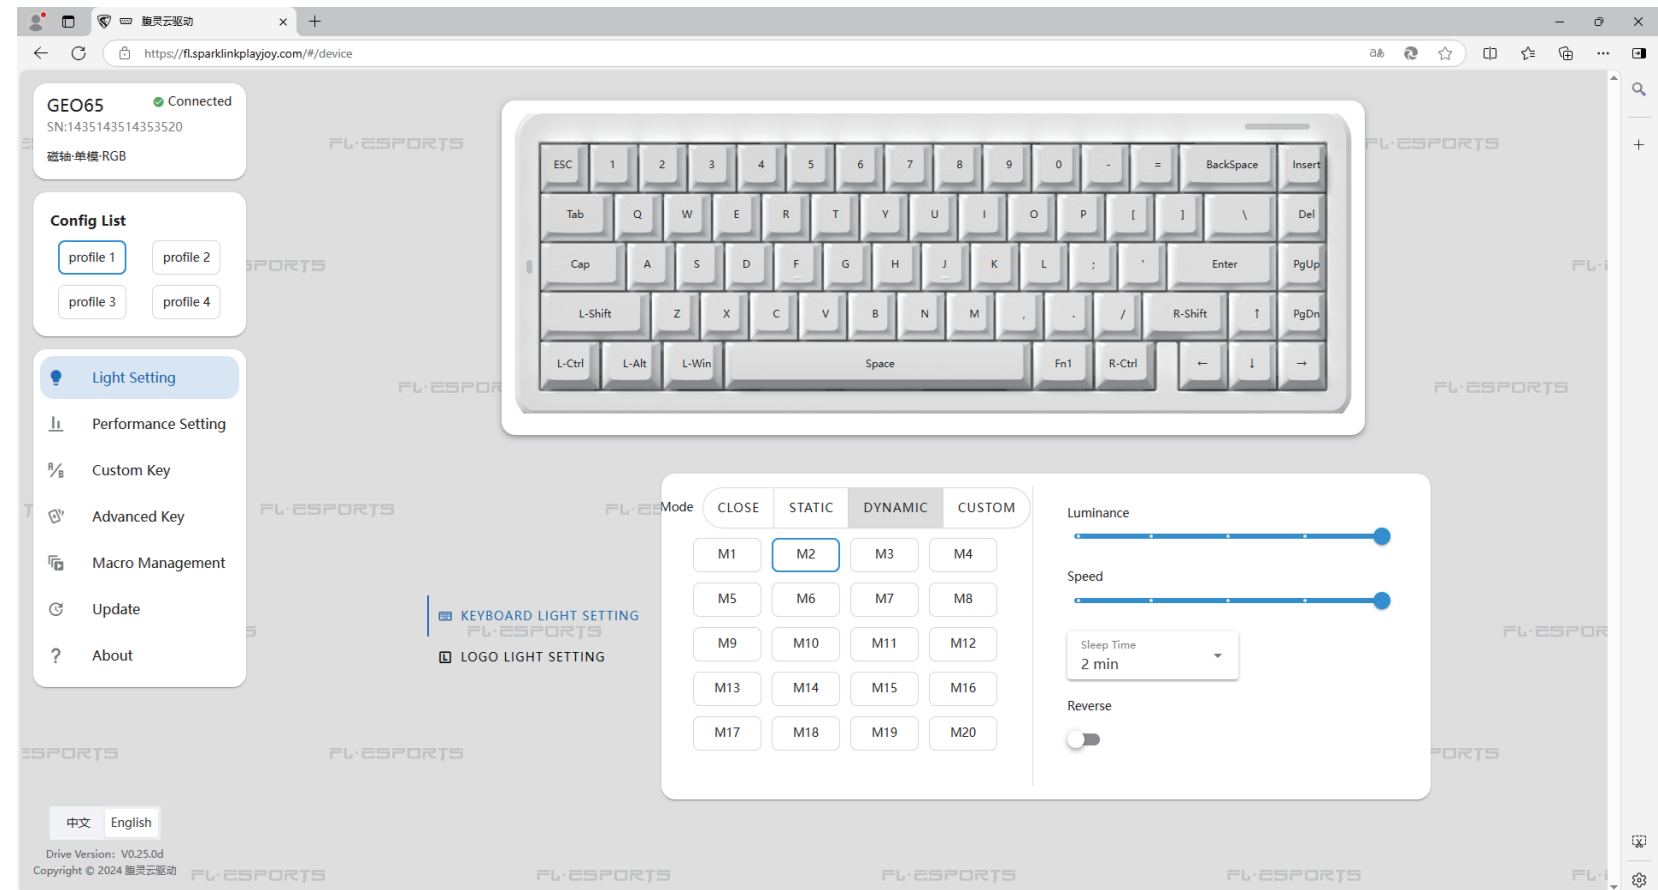

Software official download website: [www.flesports.com](http://www.flesports.com)