 


WIN 模式

Geo75 HE

FL·CMMK

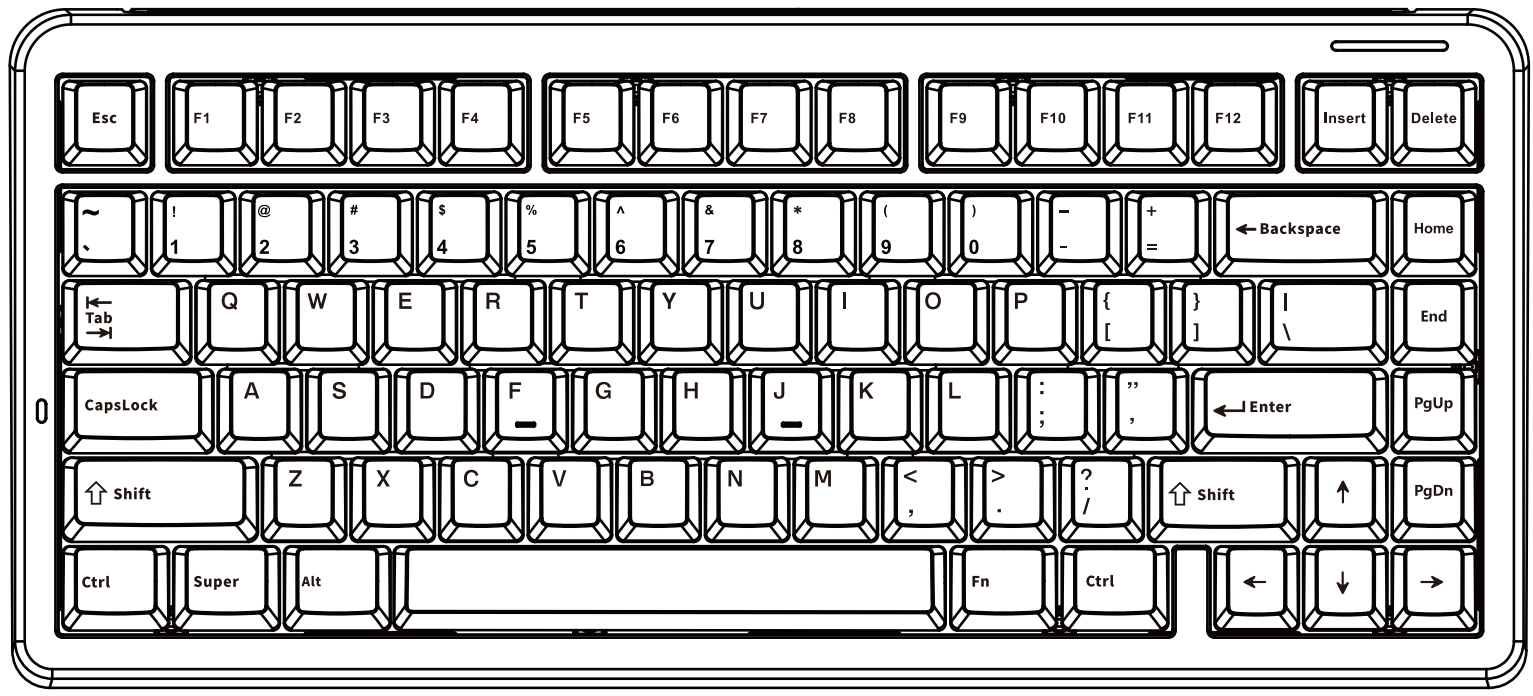 


*以上键帽字符和图案仅供参考，请以实物为准。

MAC 模式

Geo75 HE

FL·CMMK

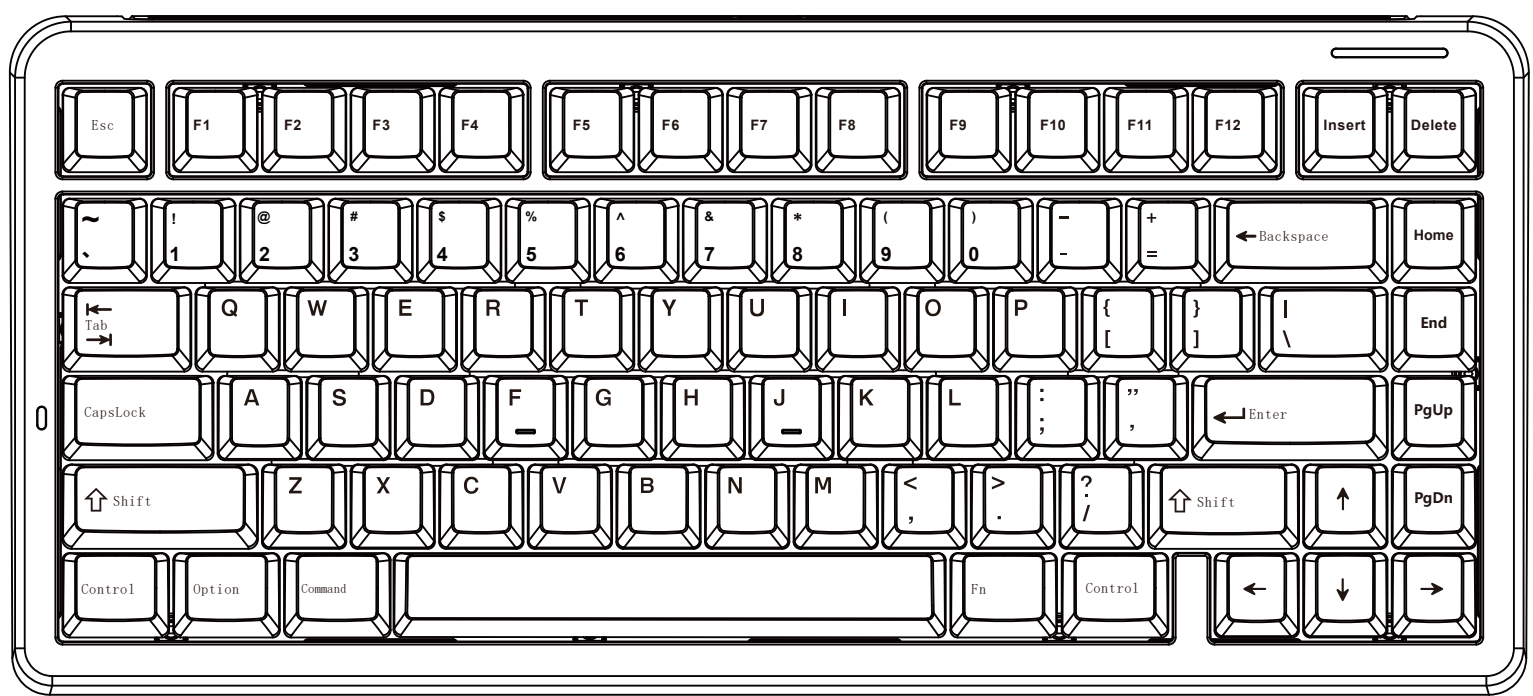


*以上键帽字符和图案仅供参考，请以实物为准。

Better for WIN

Geo75 HE

 FL·CMMK

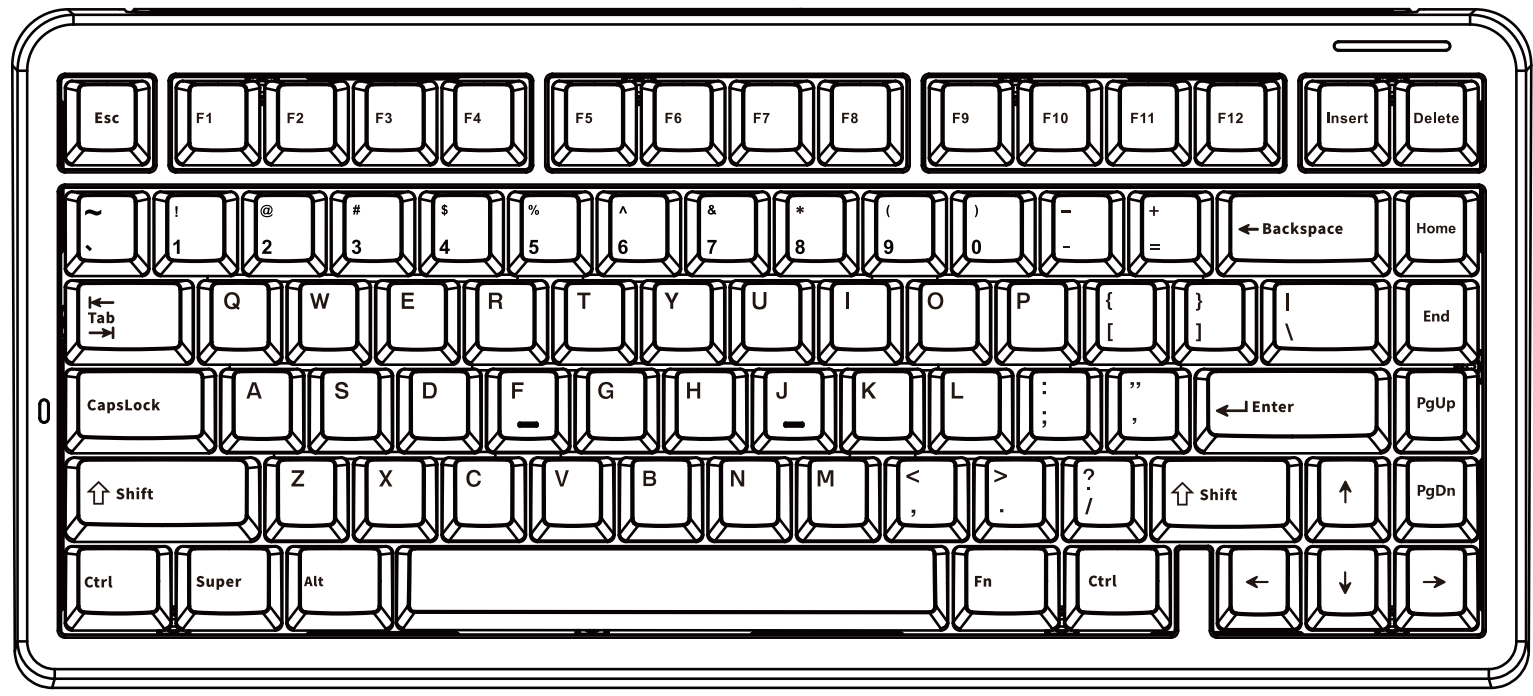


*The above keycap layout is for reference only, please see the real product.

Better for MAC

Geo75 HE

 FL·CMMK

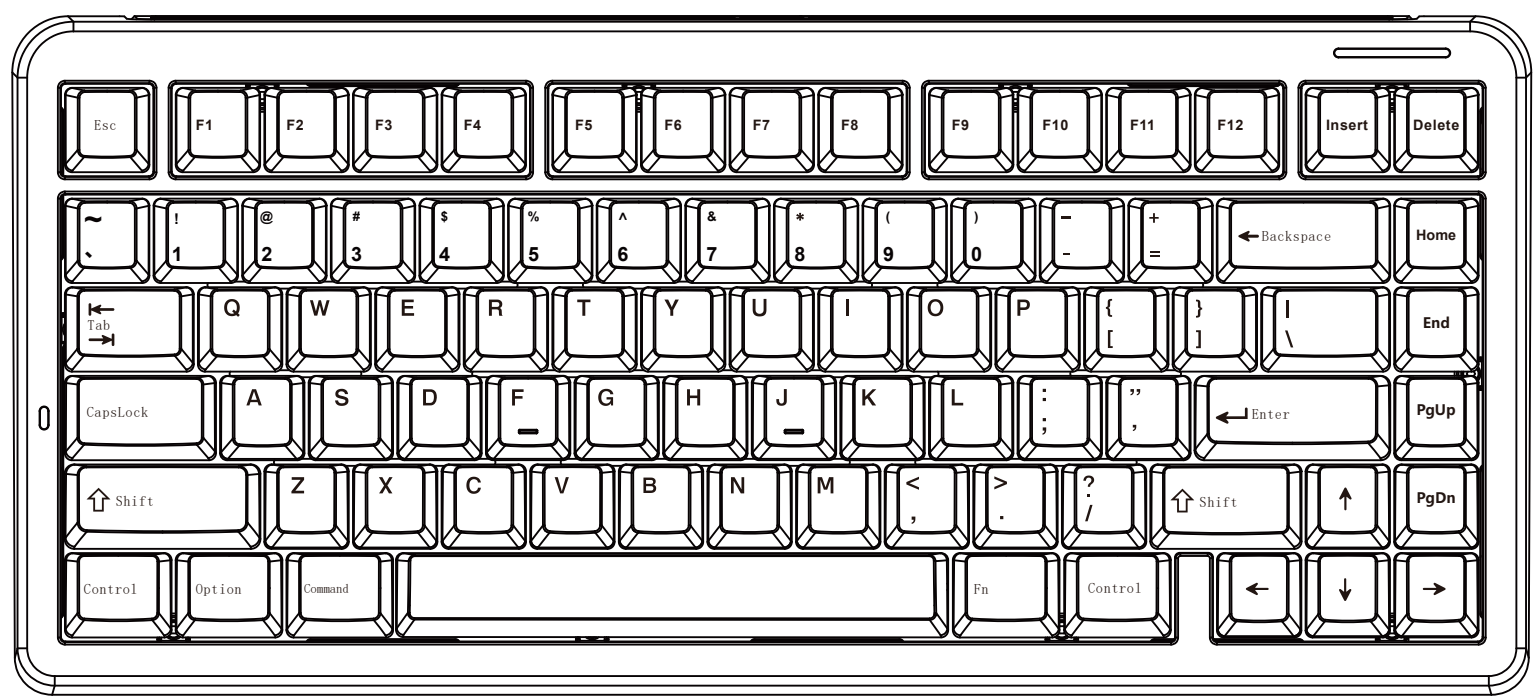

*The above keycap layout is for reference only, please see the real product.

FN组合键功能说明

灯光控制

按键	功能描述
FN+右_Ctrl	切换灯光模式
FN+右_Shift	切换灯光颜色
FN+Del	一键打开/关闭灯光(主键区)
FN+/?	切换灯光方向
FN+END	直接进入常亮模式
FN+INS	切换装饰灯条模式
FN+左右方向键	调整背光变化速率,向左调慢 向右调快
FN+上下方向键	调整背光亮度,向上调亮 向下调暗

系统控制

按键	功能描述
FN+ESC	长按2秒:恢复出厂 短按:MAC系统下FN+F区 逻辑切换
FN+`~	长按2秒:WIN和MAC系统切换
FN+左CTRL	长按2秒:进入校准模式

Windows_Android 系统模式下

按键	功能描述
FN+F1	屏幕亮度-
FN+F2	屏幕亮度+
FN+F3	计算器
FN+F4	我的电脑
FN+F5	邮件
FN+F6	主页
FN+F7	上一曲
FN+F8	播放/暂停
FN+F9	下一曲
FN+F10	静音
FN+F11	音量-
FN+F12	音量+
FN+I	PATSC
FN+O	SCRLK
FN+P	PAUSE
FN+M	APP

IOS_MAC系统模式下

按键	功能描述
FN+F1	屏幕亮度-
FN+F2	屏幕亮度+
FN+F3	多任务窗口
FN+F4	启动台
FN+F5	F5
FN+F6	F6
FN+F7	上一曲
FN+F8	播放/暂停
FN+F9	下一曲
FN+F10	静音
FN+F11	音量-
FN+F12	音量+
FN+I	PATSC
FN+O	SCRLK
FN+P	PAUSE
FN+M	APP
CTRL	Control
WIN	Option
ALT	Command

全键无冲突背光机械键盘

所谓键位冲突是指用户在使用计算机设备时,同时按下键位上的多个按键以及组合键时,电脑无法同时反映出,特别是对于游戏用户在游戏中出现的键位冲突,是特别苦恼的,游戏背光机械键盘针对键位冲突这一常见问题的,提供了完美的解决方案。

产品参数

产品类型: Geo75 HE 磁轴键盘
产品尺寸: 325.5mm (L) x 146mm (W) x 46.6mm (H)
按键数量: 82键
键盘功能: 全键无冲突
工作电压: 5V
连接方式: TYPE-C
按键寿命: 超过10000万次
线长: 1.5-2.4mm
键盘接口: USB

Q&A

Q: 为什么我的WIN键不起作用?
A: 在FN+WIN键锁定WIN键的情况下, WIN键无法触发使用。要解除锁定只需要再按一次FN+WIN键。

Q: 为什么我的WIN键和ALT键互换了?
A: 键盘进入了MAC OS模式。在此模式下Windows系统上的WIN键和ALT键将互换位置。长按FN+TAB键可手动切换系统。

Q: 为什么我在MAC OS模式下F1-F12变成了多媒体?
A: 在MAC OS模式下, 短按FN+ESC将切换FN+F区与F区多媒体键逻辑。

Q: 如何自定义按键绑定和使用功能?
A: 您可以在官方网站www.flesports.com下载最新的驱动程序体验键盘的所有功能。

FN Function description of key combination

Light Control

key	Function Description
FN+Right_Ctrl	Switch backlight effect
FN+Right_Shift	Switch constant backlight color
FN+Del	Turn on/off the backlight (Main key area)
FN+/?	Switch the backlight effect direction
FN+END	Enter constant backlight mode
FN+INS	Switch light bar effect
FN+Left/Right key	Adjust backlight effect speed
FN+Up/Down key	Adjust backlight brightness

System control

key	Function Description
FN+ESC	Long press(2s): Perform a factory reset Short press: FN+F zone logic switch under MAC system
FN+`~	Long press(2s): Switch between WIN mode and MAC mode
FN+Left Ctrl	Long press(2s): Enter key calibration mode

Windows_Android System model

key	Function Description
FN+F1	Display brightness -
FN+F2	Display brightness +
FN+F3	Calculator
FN+F4	My computer
FN+F5	E-Mail
FN+F6	Home page
FN+F7	PREV
FN+F8	Play \ pause
FN+F9	NEXT
FN+F10	Mute
FN+F11	Volume -
FN+F12	Volume +
FN+I	PATSC
FN+O	SCRLK
FN+P	PAUSE
FN+M	APP

IOS_MAC System model

key	Function Description
FN+F1	Display brightness -
FN+F2	Display brightness +
FN+F3	Mission control
FN+F4	Launchpad
FN+F5	F5
FN+F6	F6
FN+F7	PREV
FN+F8	Play \ Pause
FN+F9	NEXT
FN+F10	Mute
FN+F11	Volume -
FN+F12	Volume +
FN+I	PATSC
FN+O	SCRLK
FN+P	PAUSE
FN+M	APP
CTRL	Control
WIN	Option
ALT	Command

Full-key conflict-free backlight mechanical keyboard
The so-called key conflict refers to the situation, when a user using a computer device, presses multiple keys and combination keys simultaneously and the computer fails to respond to them all at the same time. Especially for game users, key conflicts during the game are particularly frustrating. The gaming backlight mechanical keyboard provides the perfect solution to the common problem of key conflicts.

Product parameter
Product Type: Geo75 HE Magnetic Axis Keyboard
Product Size: 325.5mm (L) x 146mm (W) x 46.6mm (H)
Number of keys: 82 keys
Keyboard function: Full key conflict-free
Working voltage: 5V
Connection mode: TYPE-C
Switch lifespan: Over 100 million times
Trigger key travel: 1.5mm-2.4mm
Cable length: 1.6 meters
Keyboard interface: USB

 
Q&A
Q: Why is my WIN key not working?
A: If you press FN+WIN to lock the WIN key, the WIN key will be disabled. To unlock it, simply press FN+WIN again.

Q: Why have my WIN and ALT keys swapped?
A: The keyboard is in Mac OS mode. In this mode, the WIN and ALT keys swap positions on Windows systems. To switch MAC OS/Windows mode, press and hold FN+TAB for 2 seconds to manually change the system mode.

Q: Why did F1-F12 switch to multimedia in MAC OS mode?
A: In MAC OS mode, short pressing FN+ESC will switch between FN+F area and F area multimedia key logic.


Q: How can I customize key bindings and use?
A: You can download the latest drivers from the official website at www.flesports.com to access all keyboard functions.

可用驱动软件重新定义属于你的按键功能和组合功能, 背光灯效也可更新下载。

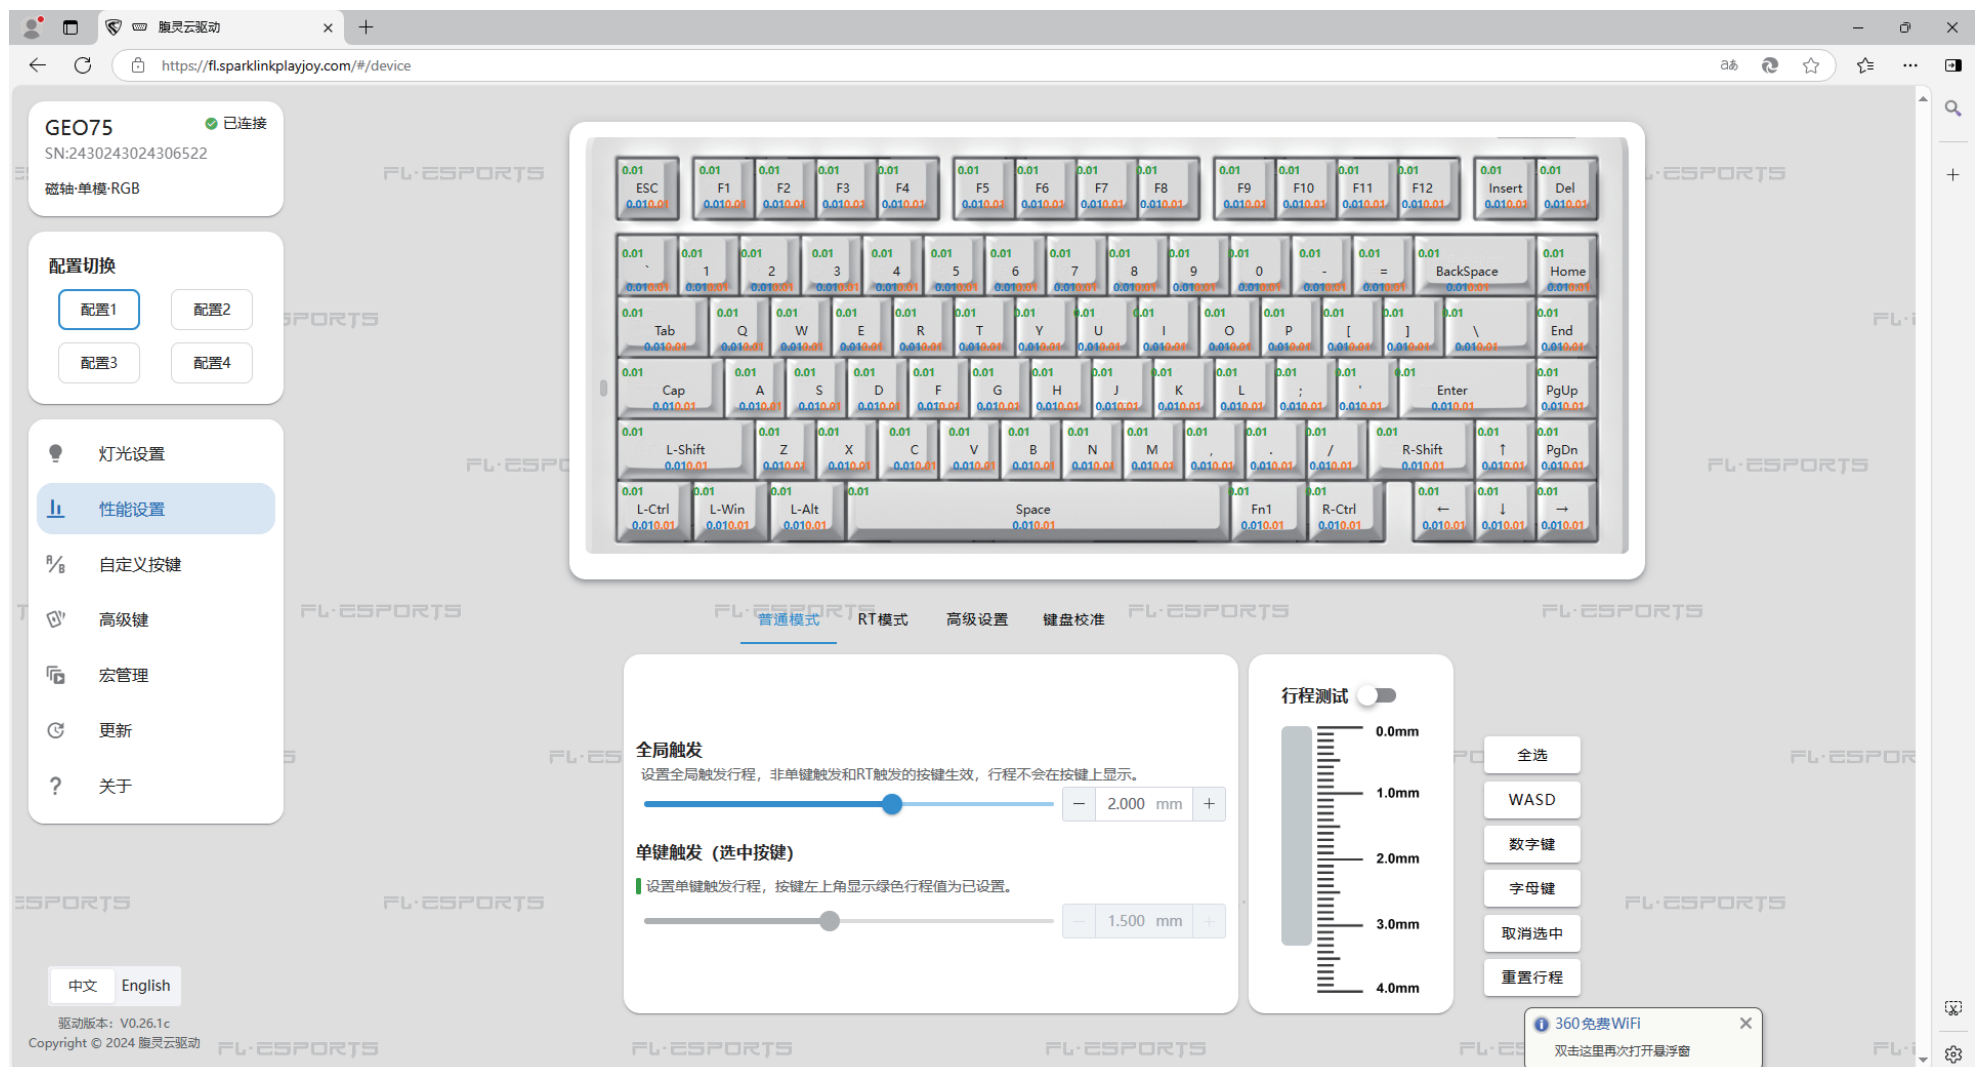

驱动程序官方下载网址: www.flesports.com

 The software can be redefined with your own button functions and combinations, and backlight effects can be updated and downloaded.

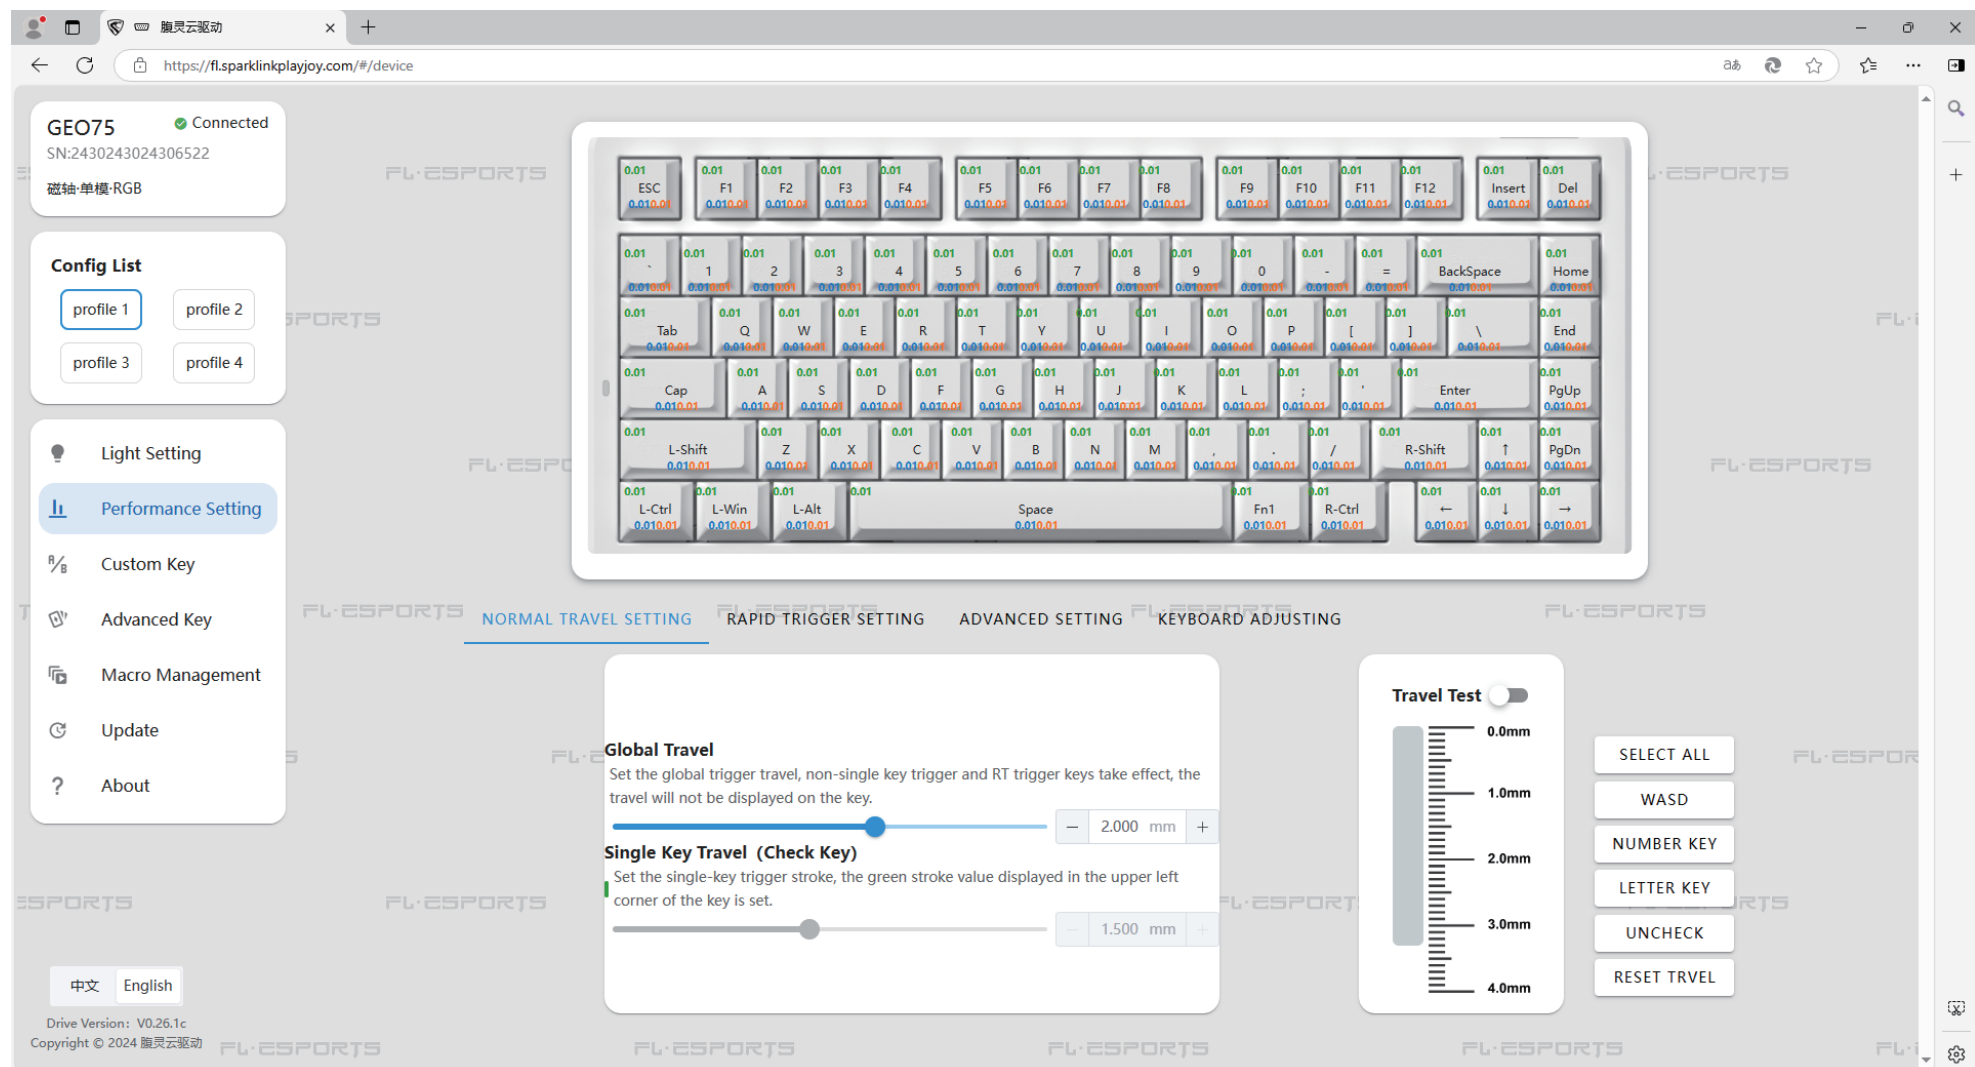

Software official download website: www.flesports.com